

PCI Installation Guide

English

INTRODUCTION

Thank you for purchasing our outstanding Voice/Fax/Data modem PCI card with Plug & Play functions. You do not have to worry about the hardware configuration as a complete setup can be run with the help of the Plug & Play driver that is included or with Windows 98/2000/Me/XP software. This manual gives you a brief outline procedure to assist with the installation in your PC.

Installation for Windows 98/2000/ME/XP (Plug & Play)


- 1.Ensure computer has been switched off.
- 2.Insert modem into an available PCI slot.
- 3.Power on PC and Windows 98/2000/ME/XP will find PCI serial controller.
- 4.Insert the driver disk included with the modem package.
- 5.Follow the instructions step by step to complete the installation process.
- 6.At the end of the installation, it is necessary to REBOOT the computer.

Hooking up the telephone cable

1. Insert one end of the modular telephone cable into the jack labeled "LINE" on the rear panel of your Voice/Fax/Data modem card and insert the other end into the telephone jack on the wall.
- 2.For voice conversations using the same telephone line, you should insert the free end of cable of the telephone set into the jack labeled "PHONE" on the rear panel of you Voice/Fax/Data modem card.

Line Connection

Figure 1 shows the back panel of the internal modem card.

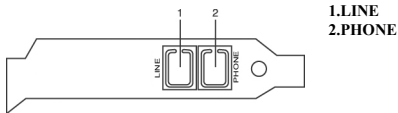

<Figure 1>

Note: Manual is included in CD disk